


SPIROL SPACER APPLICATIONS

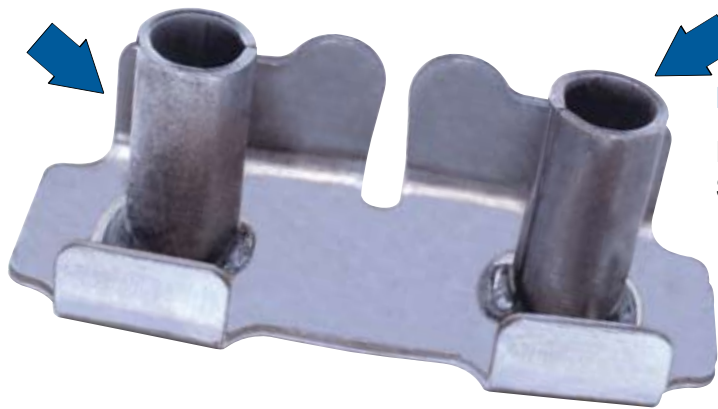


BUMPER BRACKET

Reinforces flange for bolt compression.
Spacer is welded into place.

WINDSHIELD WASHER FLUID RESERVOIR

Reinforces plastic inlet/outlet tubes for hose clamping.

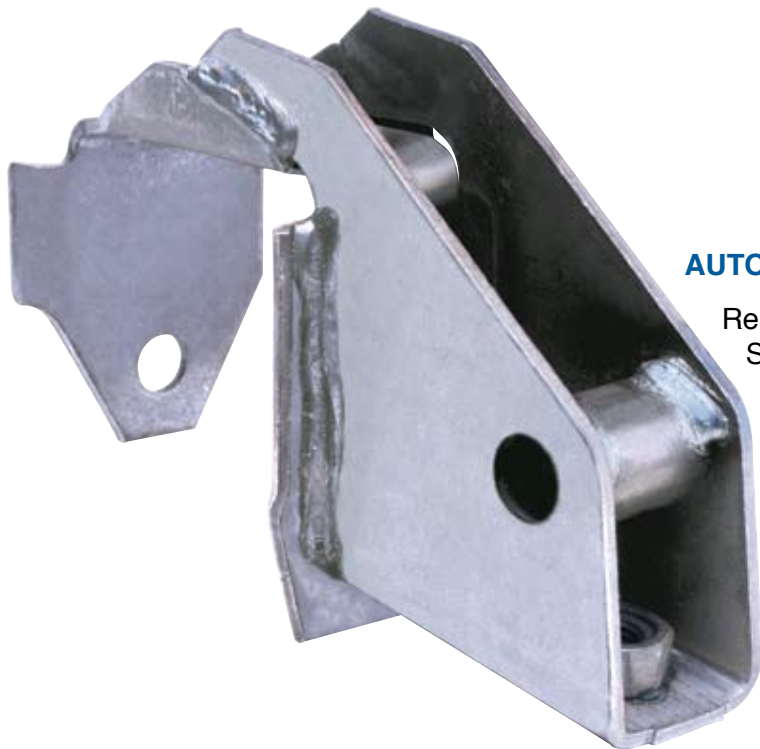


AUTOMOTIVE CHASSIS FRAME BRACKET

Reinforces hollow rectangular frame.
Spacer is welded to bracket that fits into frame.

FURNITURE/APPLIANCE FOOT COMPONENT

Separates the retention spring which is pushed into leg channel from the base. A threaded rivet passes through spacer to hold the assembly together and receive adjustable foot or castor.

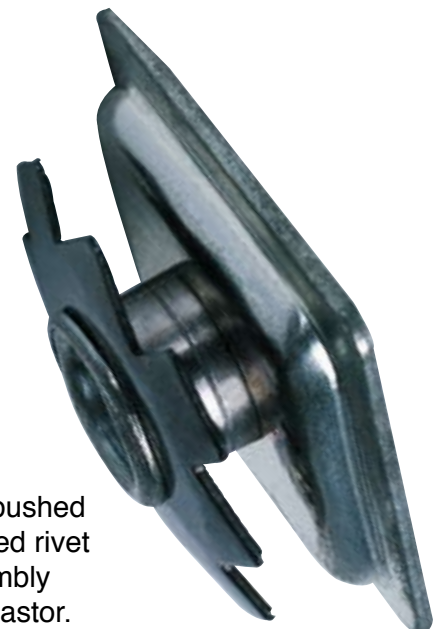

TWO CYCLE SMALL ENGINE MUFFLER EXHAUST TUBE

Rolled butted tube replaced cut tube and is welded into place.



UTILITY CART CASTOR WHEEL

Spacer is press fitted into wheel. It absorbs bolt pressure and prevents collapse of leg forks to ensure free rotation of wheel.

SHOULDER BOLT FOR DAMPENING FOOT

Spacer is staked to bolt, in some cases, after assembly of washer.




FULCRUM FOR BI-METAL COIL

The rolled tube is welded into place.

END LINK FOR FRONT END STABILIZER

Spacer replaced cut tube. Extruded washers are pushed onto ends of spacer with protrusion press fitted into inside diameter of spacer. In some applications, washers are welded in place.

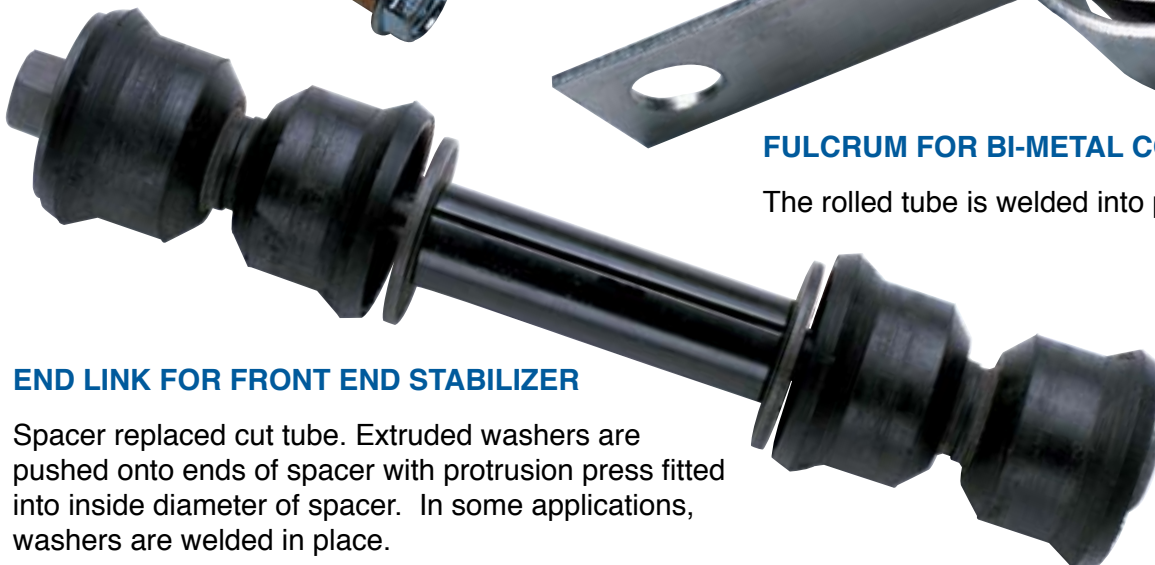

SPIROL®


BATTERY PACK FOR MINER'S LIGHT

Spacers are used as belt retention loops and are held in place with a bolt passing through the inside diameter of the spacer.



EXPANSION BOLT

A spacer is used to vary the distance between the expansion sleeve and the bolt head.

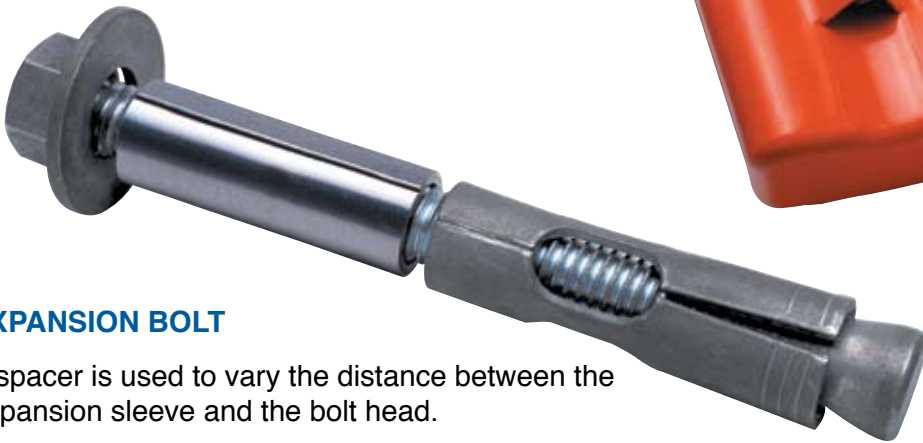

UTILITY CART WHEEL ASSEMBLY

Headed spacer is riveted into place to replace bolt or rivet. Wheel has spacer to prevent fork compression.



RAIN GUTTER SPACER

Spacer reinforces rain gutter when being installed.



WHEEL CHAIR

Spacers are used to separate hand wheel from wheel as well as in several other locations to replace cut-off tubing.



RUBBER GROMMET RETAINER

The tubular part is used as a compression ring to hold a rubber grommet in position.



FLANGE HINGE

A traditional spacer application to eliminate flange collapse when bolt is torqued on installation to achieve the desired friction fit.




LEAF SPRING

Hardened spacers are force fitted into the inside diameters of rubber absorption grommets. They absorb bolt compression force and isolate bolt pressure from the rubber grommet.



SCISSOR JACK

Eight spacers are used as distance bushings and reinforcements (welded into place) in the pivot joints.

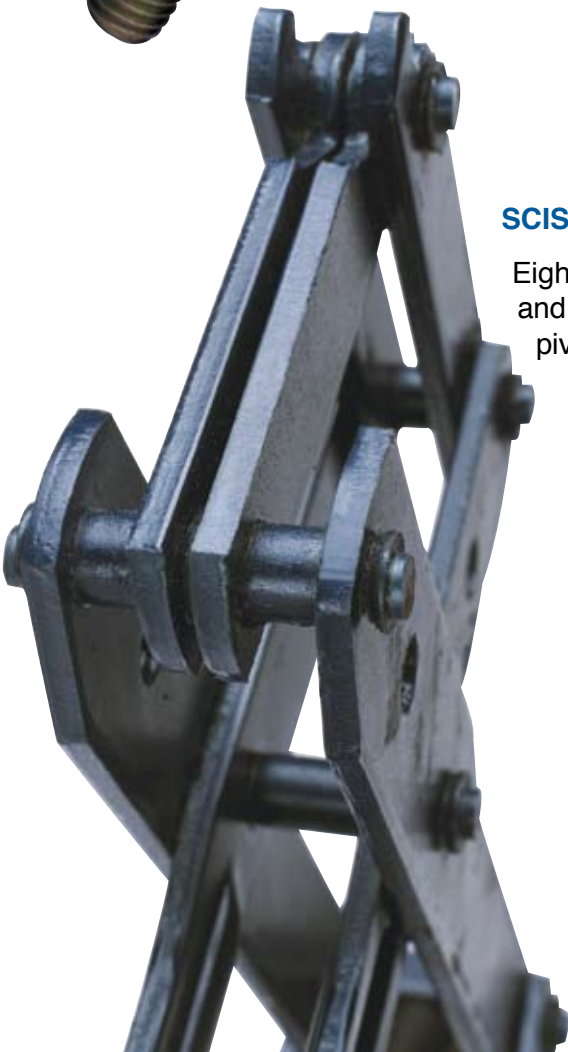

CASTOR WHEEL SOCKET (CASTOR NIB)

The rolled tube is welded to leg. Socket stem with locking ring is press fitted into inside diameter of the tube.



SPIROL®

Innovative fastening solutions.
Lower assembly costs.



Challenge Us!

SPIROL Application Engineers will review your application needs and work with your design team to recommend the best solution. One way to start the process is to visit our **Optimal Application Engineering** portal at www.SPIROL.com.

U.S.A. Spirol International Corporation
30 Rock Avenue
Danielson, Connecticut 06239
Tel. +1 (1) 860.774.8571
Fax. +1 (1) 860.774.2048

Spirol West Inc.
1950 Compton Avenue, Unit 111
Corona, California 92881-6471
Tel. +1 (1) 951.273.5900
Fax. +1 (1) 951.273.5907

**Spirol International Corporation
Shim Division**
321 Remington Road
Stow, Ohio 44224
Tel. +1 (1) 330.920.3655
Fax. +1 (1) 330.920.3659

Spirol Distribution
(For Distributor Customers)
30 Rock Avenue
Danielson, Connecticut 06239
Tel. +1 (1) 860.774.8571
Fax. +1 (1) 860.774.0487

Canada Spirol Industries, Ltd.
3103 St. Etienne Boulevard
Windsor, Ontario
Canada N8W 5B1
Tel. +1 (1) 519.974.3334
Fax. +1 (1) 519.974.6550

Mexico Spirol México, S.A. de C.V.
Carretera a Laredo KM 16.5 Interior E
Col. Moisés Saenz
Apodaca, N.L. 66613 México
ó Apdo. Postal 151 de Apodaca, N.L.
Tel. +52 (01) 81 8385 4390
Fax. +52 (01) 81 8385 4391

Europe Spirol Industries, Ltd.
Princewood Road
Corby, Northants
England NN17 4ET
Tel. +44 (0) 1536 444800
Fax. +44 (0) 1536 203415
(UK Distributors: Tel. 0800 3890034)

Spirol SAS
Rue Henri Rol Tanguy
Z.A. Les Naux
51450 Bétheny - Reims
France
Tel. +33 (0) 3 26 36 31 42
Fax. +33 (0) 3 26 09 19 76

Spirol GmbH
Briener Strasse 9
80333 Munich
Germany
Tel. +49 (0) 931 454 670 74
Fax. +49 (0) 931 454 670 75

**Asia Pacific Spirol International Engineered
Fastener Trading Co. Ltd.**
No. 11 Xi Ya Rd. North
Section A, 1F, Building 14
Wai Gao Qiao Free Trade Zone
Shanghai, China 200131
Tel. +86 (0) 21 5046-1451/1452
Fax. +86 (0) 21 5046-1540

e-mail: info@spirol.com

www.SPIROL.com